



rosca m.10 / 70 X 70 / Ø 50



AR011200  balaustre 800 / 870
ARRANQUE GOYA ■ 1200 (int. 720)
 AR01CS12  soldar Fe
AR. GOYA METALICO ■ 1200 (int. 720)


AR02  balaustre 870
ARRANQUE FLOR ■ 1200 (int. 840)

AR030970  balaustre 700
ARRANQUE PERA ■ 970 (int. 642)
 AR031180  balaustre 800 / 870
ARRANQUE PERA ■ 1180 (int. 745)

Columnas de Arranque

Start Pilars


rosca m.10 / 70 X 70 / Ø 50

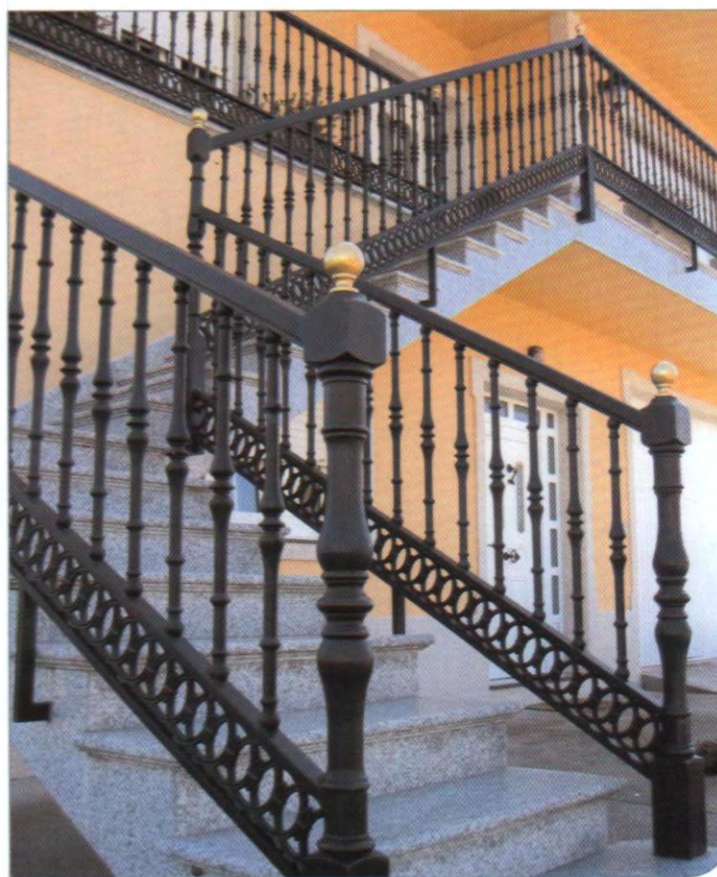

- AR040820 balaustre 500 / 600
AR. FLOR CUAD. ■ 820 (int. 460)
- AR041030 balaustre 700
AR. FLOR CUAD. ■ 1030 (int. 670)
- AR041100 balaustre 800
AR. FLOR CUAD. ■ 1100 (int. 750)
- AR041250 balaustre 870
AR. FLOR CUAD. ■ 1250 (int. 820)



BALAUSTRAS - COLUMNAS DE ARRANQUE / BALUSTERS - START PILARS

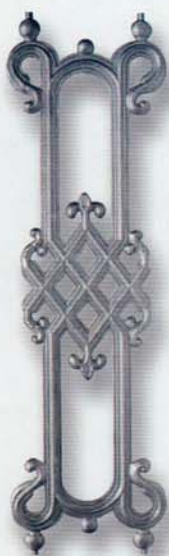

BA240500 ancho 260
BALAUSTRAS ALHAMBRA ■ 500

BA240700 ancho 260
BALAUSTRAS ALHAMBRA ■ 700

BA240870 ancho 260
BALAUSTRAS ALHAMBRA ■ 870



AR061250 balaustre 870
AR. FLOR DADO BASE 70 X 70 ■ 1250 (int.800)

AR061350 balaustre 870
AR. FLOR DADO BASE 100 X 100 ■ 1350 (int.800)



AR050940 balaustre 700
AR. TROYA CON BASE ■ 940 (int.600)

AR051075 balaustre 800
AR. TROYA CON BASE ■ 1075 (int.700)

AR051170 balaustre 870
AR. TROYA CON BASE ■ 1170 (int.800)



AR081030 balaustre 700
AR. PERA BASE 100 X 100 ■ 1030 (int.650)

AR081250 balaustre 870
AR. PERA BASE 100 X 100 ■ 1250 (int.800)



AR071030 balaustre 700
AR. FLOR BASE 100 X 100 ■ 1030 (int.650)

AR071250 balaustre 870
AR. FLOR BASE 100 X 100 ■ 1250 (int.800)

